



INSTALLATION AND OPERATION MANUAL

Horizontal Flash Tank

HAFT Series



Please read and save these instructions

IB-116

Horizontal Flash Tank

HAFT Series

WARNING!



This bulletin should be used by experienced personnel as a guide to the installation of the Armstrong Horizontal Flash Tank. Selection or installation of equipment should always be accompanied by competent technical assistance. You are encouraged to contact Armstrong International, Inc. or its local sales representative for additional information.

> Installation and Maintenance

The maximum operating pressure for the Armstrong Horizontal Flash Tank is 150 psig (10.3 bar). The maximum design pressure for the Armstrong Flash Tank is 150 psig @ 500°F (10.3 bar @ 260°C). Armstrong Horizontal Flash Tanks vary in weight:

HAFT-4 = 42 lbs (19 kg)

HAFT-10 = 55 lbs (24 kg)

HAFT-2448 = 231 lbs (103 kg)

HAFT-6 = 46 lbs (20 kg)

HAFT-12 = 92 lbs (41 kg)

HAFT-2472 = 560 lbs (252 kg)


HAFT-8 = 50 lbs (22 kg)

HAFT-16 = 135 lbs (60 kg)

HAFT-30 = 960 lbs (432 kg)

> Horizontal Flash Tank Operation

1. Condensate from various points of operation enters the flash tank at relatively high pressure. As the condensate enters the low pressure flash tank, part of the condensate flashes into steam.
2. The flash steam exits through the vent at the top of the tank and is either vented to atmosphere or piped to a low pressure line for use in low pressure steam applications.
3. The condensate is discharged through the bottom of the flash tank. When piping flash steam into a low pressure steam line and discharging condensate directly to a return line, it is important that the condensate has enough of a pressure differential to overcome any back pressure from the return line. Additionally, the placement of a steam trap after the flash tank would be necessary to prevent blow through of steam. If a steam trap is necessary, an inverted bucket (IB) trap is suggested (F&T can be substituted). The trap should be sized with a 3:1 safety factor. If back pressure exceeds tank pressure, the use of a reservoir and pumping trap may be necessary to ensure proper drainage.

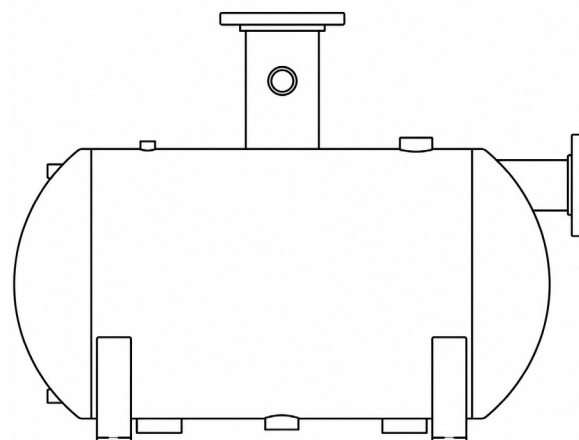

If the flash tank is held at atmospheric pressure, the use of a steam trap on the discharge line would not be necessary since the flash steam is being vented to atmosphere. The condensate, in this case, would be drained by gravity to a vented receiver which would be placed below the level of the flash tank.



Questions? Call (269) 273-1415 from 8am – 5pm EST, Mon-Fri

Armstrong International | The Americas | Asia | Europe, Middle East, Africa | armstronginternational.com

Designs, materials, weights and performance ratings are approximate and subject to change without notice. Visit armstronginternational.com for up-to-date information.

652-A

> Suggested Installation and Application

1. A flash tank, like a pumping trap or reservoir, should be located below any equipment or steam lines being drained. Condensate return lines should be pitched toward the flash tank. It is important that the flash tank be securely bolted to the surface on which it sits. Accordingly, inlet and outlet piping should be properly supported.

IMPORTANT: The flash tank is not designed to be the sole supporting structure for piping.

2. When multiple return lines are fed into the flash tank, check valves should be fitted to each line to prevent a reversal flow of condensate and resultant flash steam.
3. It is suggested that the condensate lines, the flash tank and the low pressure steam line be insulated to prevent waste of flash through radiation.
4. If the flash steam will be piped to a low pressure steam line for use in other applications within a plant, such as use in low pressure heating equipment, the flash tank pressure must be controlled accurately.

A - A back pressure regulator (BPR) should be connected into the low pressure steam line. This will relieve excess pressure in the system when steam demand is less than the amount of flash steam produced. The BPR should be sized to relieve the entire project load.

CAUTION: Do not use a BPR as a safety relief valve.

B - A pressure reducing valve (PRV) should be connected into the high pressure steam line for make up steam. This will supplement the flash steam when the steam demand is greater than the amount of flash steam produced. The PRV should be sized to provide the entire low pressure steam demand.

IMPORTANT: A properly sized safety relief valve should be installed on the flash tank. It should be set for the flash tanks maximum allowable working pressure (MAWP) or the MAWP of equipment being supplied by the low pressure steam.

> Troubleshooting

Symptom	Problem	Solution
Flash Tank Vibrates Excessively	Possibly water hammer. Condensate lines and/or flash vessel may be undersized. Vessel not secured	Contact factory
Excessive Flash Steam	Need to adjust pressure reducing valve or back pressure regulator	If too much flash steam is being produced, set your back pressure regulator to reduce excess steam pressure or reduce make-up steam through PRV
Back Pressure Regulator Vents Often	Differential settings between BPR and PRV	Set PRV on make-up steam a few psi below desired low steam pressure and set the BPR a few psi above desired low steam pressure
Blowing Steam Into Return Line, Pressurizing Return Line	Steam trap may have failed	Replace trap
Flash Tank Floods and/or Upstream Equipment Floods	Steam trap or pump trap on discharge line may have failed. Discharge check valve may have failed	Isolate and check traps and check valves
Safety Relief Valve Blows	Set point on valve too low	Set valve for maximum pressure rating of vessel or the maximum operating pressure of equipment downstream. Replace if it blows



Questions? Call (269) 273-1415 from 8am – 5pm EST, Mon-Fri

Armstrong International | The Americas | Asia | Europe, Middle East, Africa | armstronginternational.com

Designs, materials, weights and performance ratings are approximate and subject to change without notice. Visit armstronginternational.com for up-to-date information.

652-A

> Flash Tank Sizing

Selecting the proper flash tank depends upon the condensate load entering the vessel and the corresponding amount of flash steam that is generated. See the sizing example below. The percentage of flash steam generated inside a vessel is calculated by the following formula:

$$\% \text{ of Flash Steam} = \frac{SH - SL}{H} \times 100$$

SH = Sensible heat in the condensate at the higher pressure before discharge.

SL = Sensible heat in the condensate at the lower pressure to which the discharge takes place.


H = Latent heat in the steam at the lower pressure to which the condensate had been discharged.

Note: Exact temperatures can be located in the steam table.

Let's say for example that we have 300°F (149°C) condensate flowing at 10,000 lb/hr @ 125 psig into a flash tank held at 15 psig. Calculate the amount of flash steam generated at these parameters.

$$\% \text{ of Flash Steam} = \frac{324.82 - 218.62}{945.3} \times 100$$

$$\% \text{ of Flash Steam} = .112 \text{ or } 11.2\%$$

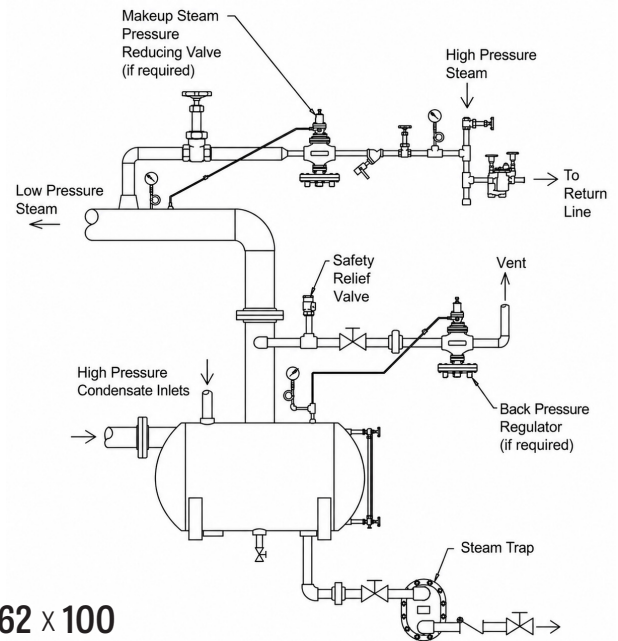

To find the amount of flash steam in lb/hr we would need to multiply our condensate load by the percent of flash steam produced. In this case we would have the following:

$$.112 \times 110,000 \text{ lb/hr} = 1,120 \text{ lb/hr flash steam produced}$$

According to this example, you will need a flash tank that can handle 1120 lb/hr flash steam. This would be Armstrong's model HAFT-2448. For further sizing questions, please see Armstrong's All Product Catalog 326 or call the factory.



Questions? Call (269) 273-1415 from 8am – 5pm EST, Mon-Fri

Armstrong International | The Americas | Asia | Europe, Middle East, Africa | armstronginternational.com

Designs, materials, weights and performance ratings are approximate and subject to change without notice. Visit armstronginternational.com for up-to-date information.

652-A

LIMITED WARRANTY AND REMEDY

Armstrong International, Inc. or the Armstrong division that sold the product ("Armstrong") warrants to the original user of those products supplied by it and used in the service and in the manner for which they are intended, that such products shall be free from defects in material and workmanship for a period of one (1) year from the date of installation, but not longer than 15 months from the date of shipment from the factory, [unless a Special Warranty Period applies, as listed below]. This warranty does not extend to any product that has been subject to misuse, neglect or alteration after shipment from the Armstrong factory. Except as may be expressly provided in a written agreement between Armstrong and the user, which is signed by both parties, Armstrong **DOES NOT MAKE ANY OTHER REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR ANY IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.**

The sole and exclusive remedy with respect to the above limited warranty or with respect to any other claim relating to the products or to defects or any condition or use of the products supplied by Armstrong, however caused, and whether such claim is based upon warranty, contract, negligence, strict liability, or any other basis or theory, is limited to Armstrong's repair or replacement of the part or product, excluding any labor or any other cost to remove or install said part or product, or at Armstrong's option, to repayment of the purchase price. As a condition of enforcing any rights or remedies relating to Armstrong products, notice of any warranty or other claim relating to the products must be given in writing to Armstrong: (i) within 30 days of last day of the applicable warranty period, or (ii) within 30 days of the date of the manifestation of the condition or occurrence giving rise to the claim, whichever is earlier. **IN NO EVENT SHALL ARMSTRONG BE LIABLE FOR SPECIAL, DIRECT, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING, BUT NOT LIMITED TO, LOSS OF USE OR PROFITS OR INTERRUPTION OF BUSINESS.** The Limited Warranty and Remedy terms herein apply notwithstanding any contrary terms in any purchase order or form submitted or issued by any user, purchaser, or third party and all such contrary terms shall be deemed rejected by Armstrong.



Questions? Call (269) 273-1415 from 8am – 5pm EST, Mon-Fri

Armstrong International | The Americas | Asia | Europe, Middle East, Africa | armstronginternational.com

Designs, materials, weights and performance ratings are approximate and subject to change without notice. Visit armstronginternational.com for up-to-date information. 652-A