



# Actuator display lights up intermittently, but does not move

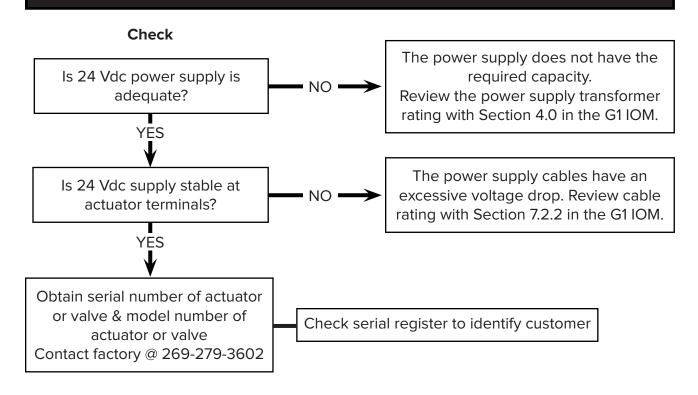


# Actuator dead (display not lit, no movement)

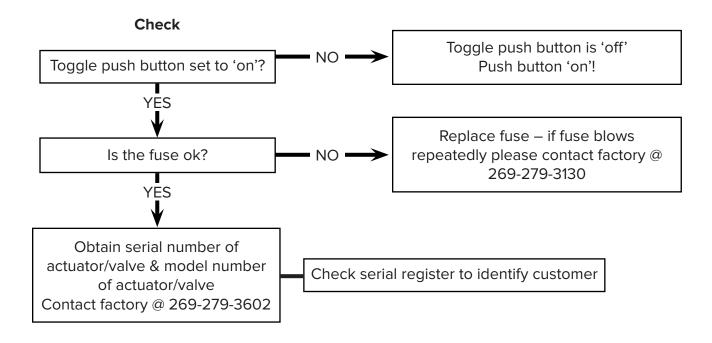




# No communication when using EmechConfig

#### Check

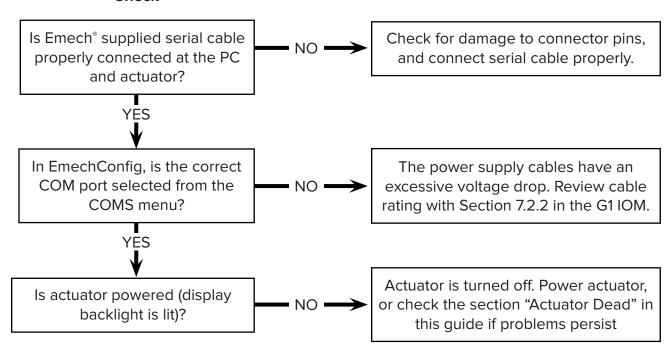

# Actuator displays 'E2' when set Temperature Controller Mode


#### Check

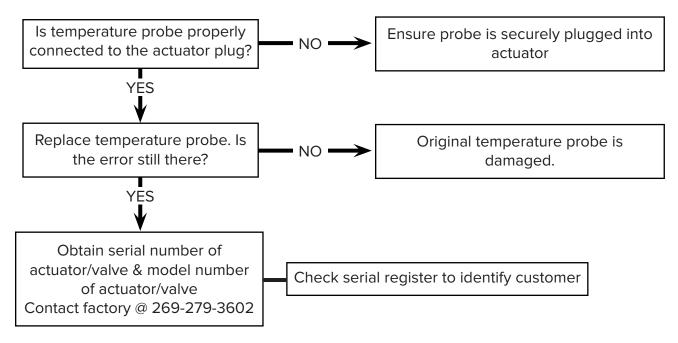



#### Failure to Reach Set Point

#### Check

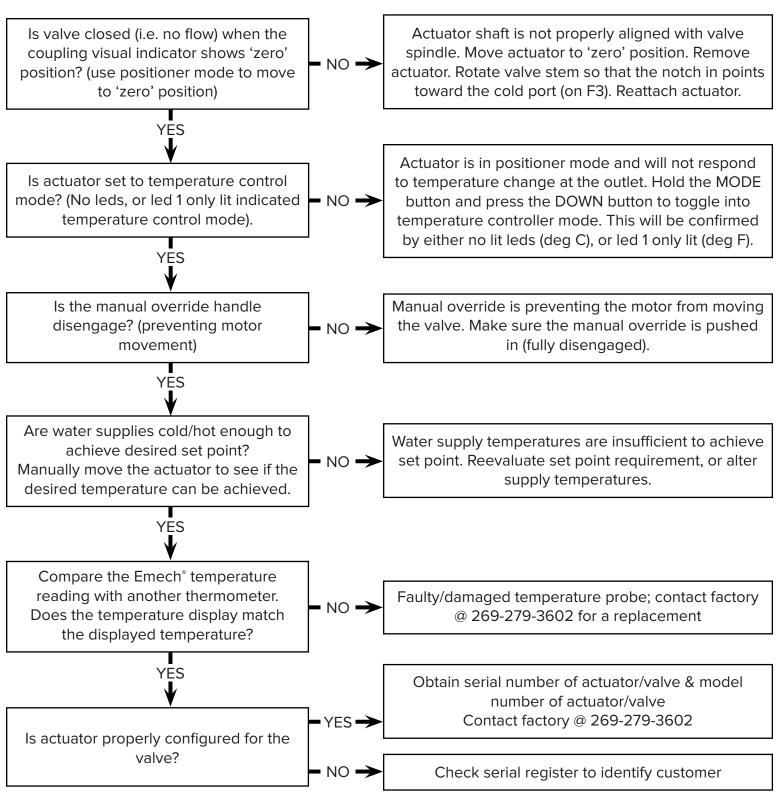


Armstrong International

221 Armstrong Blvd., Three Rivers, Michigan, 49093 - USA Phone (269) 279-3602 Toll Free (888) HOT-HOSE (468-4673) Fax (269) 279-3130 Designs, materials, weights and performance ratings are approximate and subject to change without notice. Visit **armstrong**international.com/emech for up-to-date information.



#### **Control is Unstable/Oscillates**

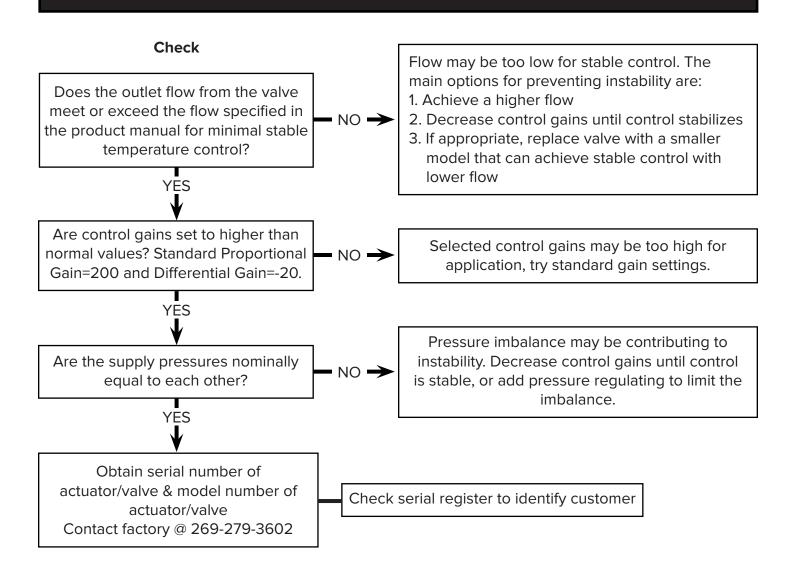



#### **Control is Unstable/Oscillates**

#### Check

